

A person wearing a helmet and riding gear is shown from a rear-quarter perspective, riding a motorcycle on a road. The background shows a hazy, mountainous landscape. A large, white, semi-transparent graphic element, resembling a stylized 'J' or a protective shield, is overlaid on the right side of the image, partially obscuring the rider and the motorcycle.

# J. safeguard MOTO

Just makes sense to ride without worries.

## FOR STRESS-FREE RIDING

**J. safeguard Moto 12 months/10,000 km**

**499 €** (incl. VAT 24%)

Available for motorcycles up to 15 years old that are registered for road use, driven less than 60,000 kilometres and have a cubic capacity of more than 200 cm<sup>3</sup>.

**J. safeguard Moto 24 months/20,000 km**

**799 €** (incl. VAT 24%)

Available for motorcycles up to 15 years old that are registered for road use, driven less than 60,000 kilometres and have a cubic capacity of more than 200 cm<sup>3</sup>.

## This is what the J. safeguard Moto covers:



### ENGINE

The following lubricated internal parts: camshaft and camshaft bearings, connecting rods and bearings, crankshaft and main bearings, oil pump, push rods, rocker arms and valve lifters, pistons, piston rings and pins, bearing sleeves, timing chain sprockets, valve springs, guides and seats (excl. valve stem seals), water pump. Cylinder head(s), cylinder group, cylinder liners and valve covers only if the damage is caused by the breakage of an internal lubricated part covered by the safeguard programme. Insulations and gaskets only if the above vehicle parts are replaced.



### GEARING

The following lubricated parts inside the gearbox: gears, bearings, internal drive gears and chains, internal gear shifting mechanism and coupling bushings. The gearbox housing is only covered if the damage is caused by the breakage of a part(s) covered by the safeguard programme. Insulations and gaskets only if the above vehicle parts are replaced.



### FINAL DRIVE

Shaft drive models only: All internal lubricated parts in the drive shaft/final drive housing, final drive tunnel bearing and pulley. Final drive housing is only covered if the damage is caused by the breakage of a part covered by the safeguard programme. (Final drive chains, belts and sprockets or damage due to chain breakage are not included) Insulations and gaskets only if the above vehicle parts are replaced.



### FUEL SUPPLY

Fuel tank, fuel pump, fuel cock and metal pipes. Insulations and gaskets only if the above vehicle parts are replaced.



## STEERING

All lubricated parts inside the steering gear and power steering pump, electric power steering, power steering hoses and connections, steering shaft, steering gear, steering wheel adjustment mechanism. Insulations and gaskets only if the above vehicle parts are replaced.



## SUSPENSION

All internal lubricated parts in the front fork tubes. The springs of the rear suspension and the frame of the shock absorber, the rear fork and the bearing of the rear fork to the frame. Insulations and gaskets only if the above vehicle parts are replaced.



## BRAKES

Brake callipers, master cylinders, rear brake brackets. Insulations and gaskets only if the above vehicle parts are replaced.



## ELECTRICAL COMPONENTS

Alternator, manual electrical switches, starter motor, solenoids, stators, voltage regulator/rectifier, ignition control unit. Insulations and gaskets only if the above vehicle parts are replaced.



## INSTRUMENTS

Fuel gauge, speedometer, tachometer, temperature gauge, ammeter, oil gauge. Insulations and gaskets only if the above vehicle parts are replaced.

J. safeguard Moto covers all breakages of the above-mentioned parts, excluding the deductible.

## J. safeguard Moto does not cover e.g. the following parts:

- scheduled maintenance, software updates and adjustments
- clutch as a whole
- exhaust pipe and catalytic converter
- wiring harnesses
- brake discs, brake pads and brake shoes
- retrofit accessories
- insulations and gaskets
- vehicle breakdown or repair that occurs outside the borders of Finland

### J. safeguard Moto's compensation limit max. €5,000

Conditions of the safeguard programme: FinnTakuu Oy  
The service is provided by FinnTakuu Oy



## **IN CASE OF A SUDDEN BREAKAGE OF THE MOTORCYCLE, PLEASE DO THE FOLLOWING:**

When you need your vehicle repaired due to breakage of a part or component included in the list of components being compensated by the safeguard programme, call the number listed below or present proof of your safeguard deal at the repair shop. The representative of the repair shop calls the customer service number and requests approval for the repair. Compensation applications are accepted over the phone so that your car is in working order as quickly as possible.

**J. safeguard customer service**  
(weekdays 9-16)



**010 616 8080**



**rintajouppi.fi**